

FITTINGS, COUPLINGS & CLAMPS

FITTINGS

HOSE BARB SPLICERS



| Model No. | Hose I.D." | Price/Each |
|-----------|------------|------------|
| TA492 | 1/4 | |
| TA493 | 5/16 | |
| TA494 | 3/8 | |
| TA495 | 1/2 | |
| TA496 | 5/8 | |
| TA497 | 3/4 | |

HOSE BARB TO FEMALE PIPE CONNECTORS



| Model No. | Hose I.D." | Thread (F) NPT | Price /Each |
|--------------|---------------|-------------------|----------------|
| TZ072 | 1/4 | 1/8 | |
| TA502 | 1/4 | 1/4 | |
| TZ073 | 5/16 | 1/4 | |
| TA503 | 3/8 | 1/4 | |
| TA504 | 3/8 | 3/8 | |
| TA505 | 1/2 | 1/2 | |

HOSE BARB COUPLERS TO FEMALE BALL END



| Model No. | Hose I.D." | Thread (F) NPT | Price /Each |
|--------------|---------------|-------------------|----------------|
| TZ098 | 1/4 | 1/4 | |
| TZ100 | 5/16 | 1/4 | |
| TZ101 | 3/8 | 1/4 | |
| TZ102 | 3/8 | 3/8 | |

HOSE BARB COUPLERS FLAT SEAT WITH GASKET



| Model No. | Hose I.D." | Thread (F) NPT | Price /Each |
|--------------|---------------|-------------------|----------------|
| TZ105 | 1/4 | 1/4 | |
| TZ106 | 5/16 | 1/4 | |
| TZ107 | 3/8 | 1/4 | |
| TZ108 | 3/8 | 3/8 | |
| TZ109 | 1/2 | 1/2 | |

HOSE BARB TO MALE PIPES

| Model No. | Hose I.D." | Thread (M) NPT | Price /Each |
|--------------|---------------|-------------------|----------------|
| TZ075 | 1/8 | 1/8 | |
| TZ076 | 3/16 | 1/8 | |
| TA498 | 1/4 | 1/8 | |
| TA499 | 1/4 | 1/4 | |
| TZ077* | 1/4 | 1/4 | |
| TZ078 | 1/4 | 3/8 | |
| TZ079 | 5/8 | 3/8 | |
| TZ080 | 5/8 | 1/2 | |
| TZ081 | 5/8 | 3/4 | |
| TZ083 | 5/16 | 1/4 | |
| TZ084 | 3/8 | 1/8 | |
| TA500 | 3/8 | 1/4 | |
| TZ085* | 3/8 | 1/4 | |
| TA501 | 3/8 | 3/8 | |
| TZ086* | 3/8 | 3/8 | |
| TZ087 | 3/8 | 1/2 | |
| TZ088 | 1/2 | 1/4 | |
| TZ089 | 1/2 | 3/8 | |
| TZ090 | 1/2 | 1/2 | |
| TZ091* | 1/2 | 1/2 | |
| TZ092 | 1/2 | 3/4 | |
| TZ093 | 3/4 | 1/2 | |
| TZ094 | 3/4 | 3/4 | |
| TZ095 | 1 | 3/4 | |

TZ096 *Swivel

REUSABLE **HOSE FITTINGS**



| Model | Hose | Hose | Thread | Price |
|-------|-------|-------|---------|-------|
| No. | 0.D." | I.D." | (M) NPT | /Each |
| TZ110 | 1/2 | 1/4 | 1/4 | |
| TZ111 | 9/16 | 1/4 | 1/4 | |
| TZ112 | 5/8 | 1/4 | 1/4 | |
| TZ115 | 9/16 | 5/16 | 1/4 | |
| TZ119 | 5/8 | 3/8 | 1/4 | |
| TZ120 | 5/8 | 3/8 | 3/8 | |
| TZ121 | 11/16 | 3/8 | 1/4 | |
| TZ123 | 3/4 | 3/8 | 1/4 | |
| TZ128 | 7/8 | 1/2 | 1/2 | |

UNIMAX 5-IN-1 UNIVERSAL COUPLERS

UNIVERSAL INTERCHANGE ACCEPTS:

- Ultraflo
- 1/4 Industrial
- ARO 210
- 1/4 Truflate
- Lincoln
- Automatic push-to-connect operation
- Sleeve guard protects against accidental disconnection when the coupler is dragged on the floor or over obstructions
- Deep knurled socket sleeve for positive gripping











| Model No. | Mfg. No. | NPT | Price/Each |
|-----------|----------|-----|------------|
| FEMALE T | HREAD | | |
| TKZ830 | 20.441 | 1/4 | |
| MALE THE | READ | | |
| TKZ831 | 20.641 | 1/4 | |
| | | | |

TOPRING

UNISAFE UNIVERSAL 5-IN-1 INTERCHANGE SAFETY COUPLERS

UNIVERSAL INTERCHANGE ACCEPTS:

- Ultraflo ARO 210
- 1/4 Industrial • 1/4 Truflate
- Lincoln
- Valve sleeve is operated independently of locking sleeve
- When the valve sleeve is moved to shut off air flow downstream pressure is automatically vented
- Disconnection and connection are performed easily at zero pressure
- Automatic push-to-connect operation

| Model No. | Mfg. No. | NPT | Price/Each |
|-----------|----------|-----|------------|
| FEMALE TH | HREAD | | |
| TGA093 | 20.448 | 1/4 | |
| MALE THR | EAD | | |
| TGA098 | 20.648 | 1/4 | • |
| | | | |

TOPRING

1/4 Industrial 1/4 Truflate Lincoln Type Type



ARO 210 Type











SAFETY COMES FROM 2-STEP DISCONNECTION:



Male/female connected set



Slide the black sleeve to release downstream pressure



Slide the gold sleeve to release plug



Disconnection